

Half-Modules are the structural backbone of an ACO StormBrixx tank. In order for the system to function as designed, it is critical that the half-modules are intact prior to, during, and after installation.



Broken/collapsed seating
UNACCEPTABLE




Broken clip(s)
ACCEPTABLE




Cracks along column(s)
UNACCEPTABLE



Damaged base plate
UNACCEPTABLE

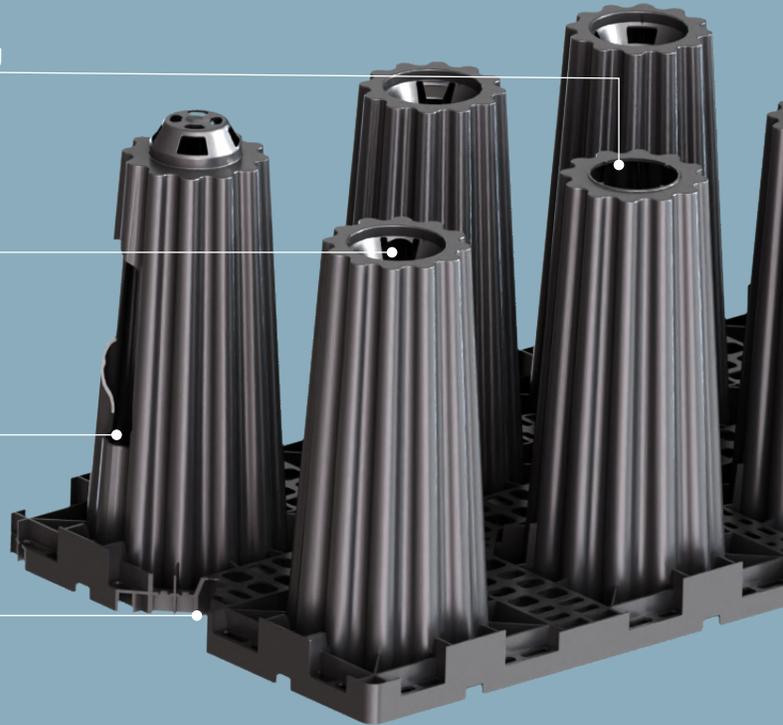

If damage is limited to ½ of a half-module (2' x 2' square), the half-module may be cut such that the intact ½ can be used as shown in the project layer orientation drawings.

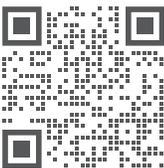

ACO recommends that half-modules be inspected upon delivery to the site and immediately prior to installation to reduce the risk of damaged half-modules being installed. Half-modules damaged during or after the installation process should be removed and replaced with intact half-modules.

ACO accounts for half-module breakage in each of our orders. Should additional half-modules be needed on site, please contact ACO for assistance.